

LUXURY ACCESSORY INSTALLATION MANUAL

*includes Matte Nickel, Matte Gold, Oil Rubbed Bronze,
and Slate Grey finishes*

Fixed Wall Hooks	2
Pull-out Belt / Scarf / Tie Rack	3
Pull-out Valet Rod	4
Slide Installation / Removal Guide	5
Pull-out Shelf	6
Pull-out Baskets	7
Pull-out Laundry Hamper / Pant Hanger	8
Pull-out Shoe Organizer	9
Fixed Mirror	10
Rotating Mirror	11

VALUE ACCESSORY INSTALLATION MANUAL

includes Chrome and Matte Chrome finishes

Fixed Wall Hooks	12
Pull-out Belt / Scarf / Tie Rack	13
Pull-out Valet Rod	14
Pull-out Baskets	15
Pull-out Laundry Hamper	16
Pull-out Pants Hanger	17
Pull-out Shoe Organizer	18
Fixed Mirror	19
Rotating Mirror	20



PRODUCT GUIDE

ELITE 14" FIXED BELT RACK 300.3012.14.[FIN]

DESCRIPTION & SPECIFICATIONS




Have a little extra wall space? Maximize it. The wall-mounted 14" Fixed Belt Rack can be used for any of your favorite accessories.

SIZE & CAPACITY | 14" w 6 hooks

AVAILABLE FINISHES |



Matte Aluminum, Polished Chrome, Matte Nickel, Oil Rubbed Bronze, Polished Brass.

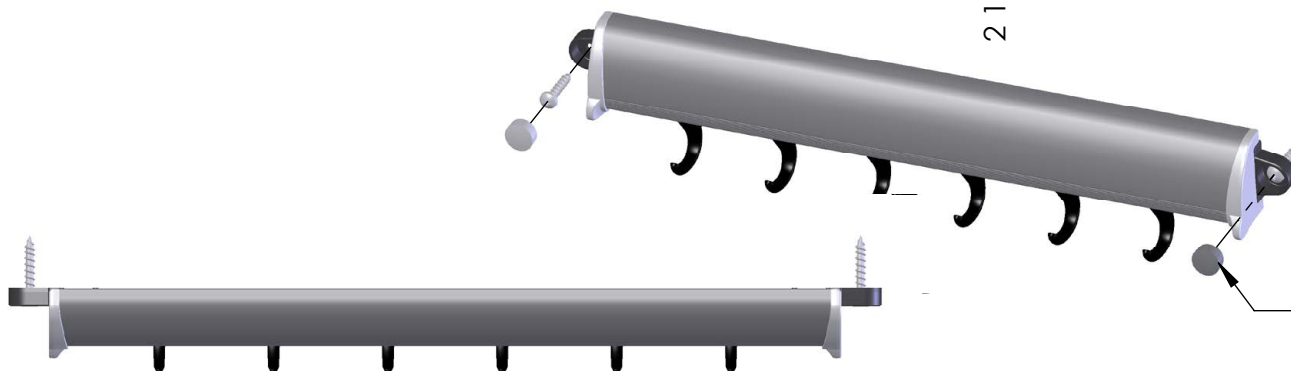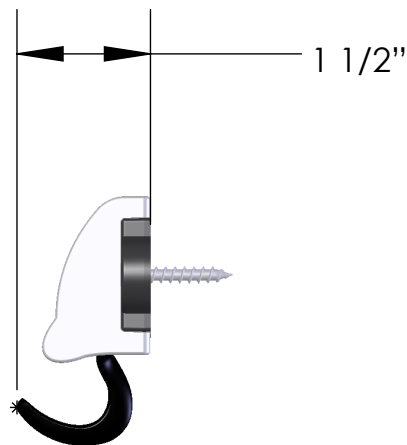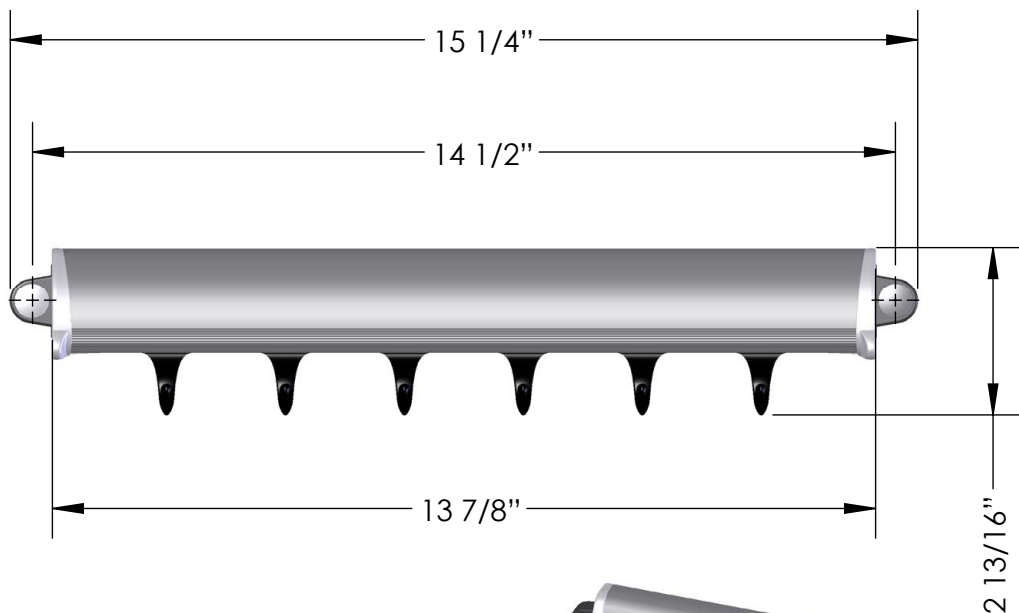

Screw Cover
Both Side

INSTRUCTIONS & SPECIFICATIONS



STEP 1: Attach rack via screw holes on rack ends.

STEP 2: Attach to stud if possible.

STEP 3: If a stud cannot be located use E-Z Anchors with #8 x 1 1/2" wood screw.


- Two (2) Wood Screws are required to mount.

FINISH	CODE (FIN)
MATTE ALUMINUM W CHROME	MALCR
POLISHED CHROME	CR
MATTE NICKLE	MNL
OIL RUBBED BRONZE	ORB
POLISHED BRASS	BS

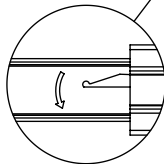



STEP 1: DISCONNECT SLIDE BY MOVING LEVELER DOWN AS THE ARROW SHOWS AND PULL APART

STEP 2: INSTALL THE INSIDE SLIDE MEMBER TO THE SIDE PANEL WITH SCREWS

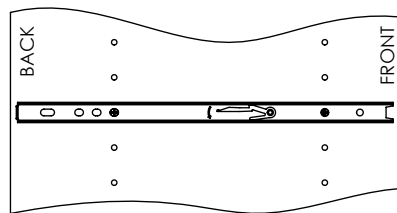


STEP 3: ALIGN SLIDE MEMBER INTO FRONT END AND PUSH BACK TOGETHER

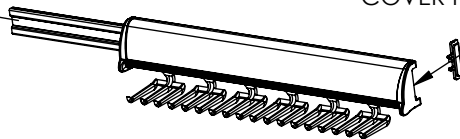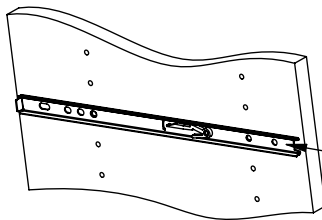


STEP 4: INSTALL THE SMALL BLACK COVER PLATE ON END OF RACK

INSTALLING VALET


STEP 1: PULL ROD OUT FROM BACK



STEP 2: MOUNT VALET TO PANEL

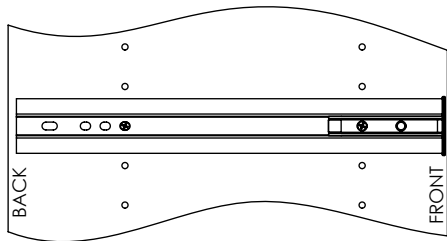


STEP 3: PUSH ROD INTO FRONT




REPOSITIONING VALET


STEP 1: REMOVE SCREW FROM REAR OF ROD

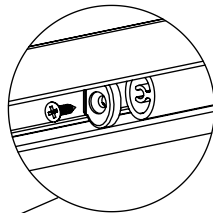

STEP 2: SLIDE ROD OUT

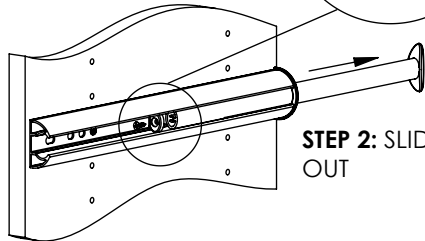


SLIDE REMOVAL

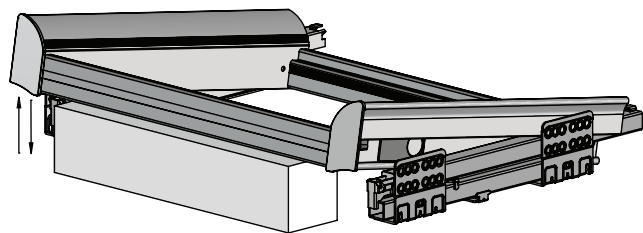


STEP 1

Extend slides and move black rectangular clips on each side of frame towards back. Impact front crossbar on packing foam to detach front frame.

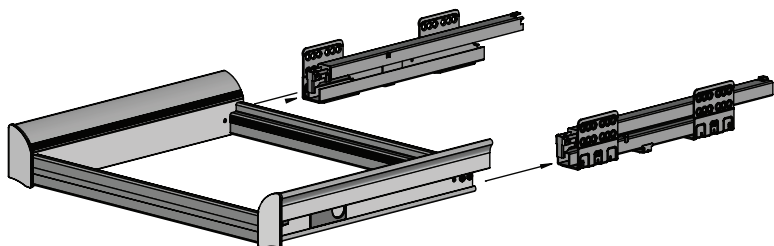

STEP 2

Push slides backwards to release from rear of frame.

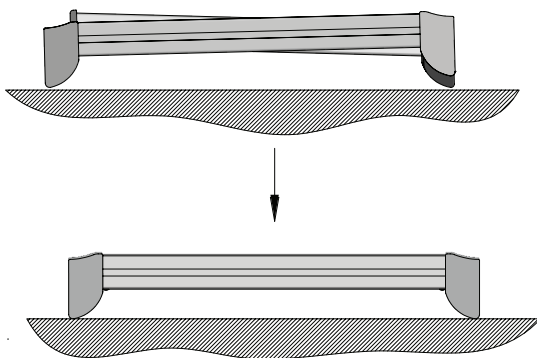

STEP 3


Press on corners to square the frame.

View How-To Videos for more information.
<https://www.youtube.com/user/TagHardware>

SLIDE INSTALLATION


STEP 1

Mount slides on panels and extend arms out.

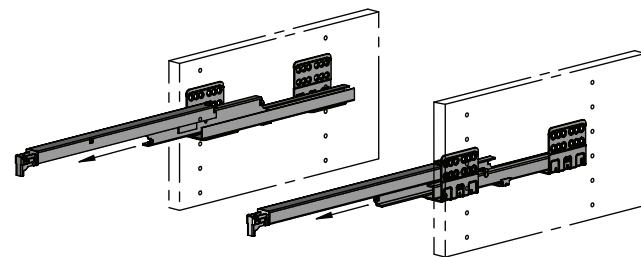



STEP 2

Put rear of frame onto slides and push back on angle into rear slot. Press front of frame down, snapping frame onto slide arms.

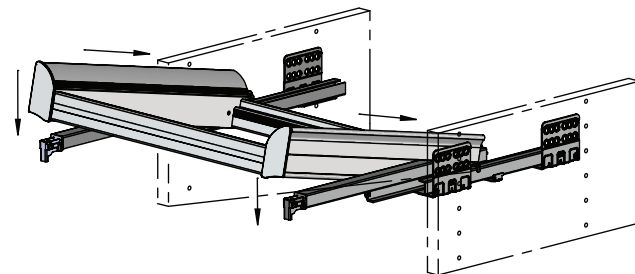


STEP 3

Slide black clips to the front.

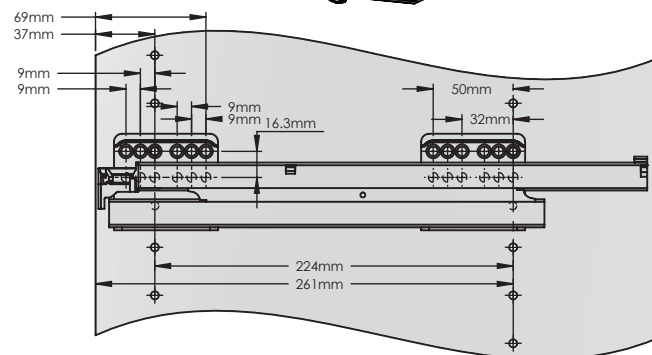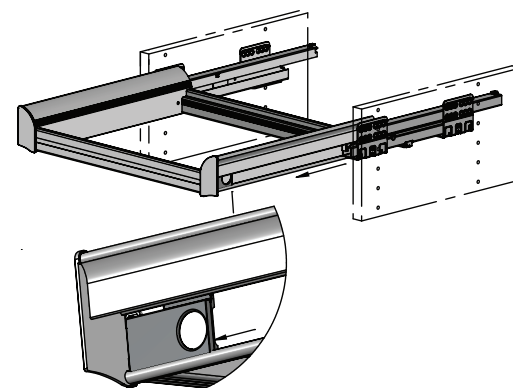


FOLDING STATION CONFIG

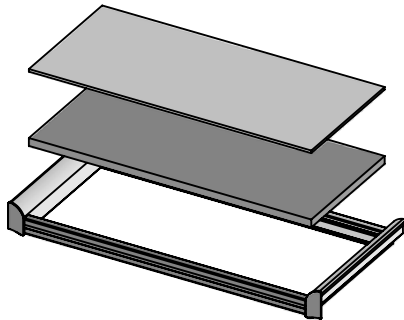


CUT AND PLACE A 3/4 INCH BASE INTO THE FRAME, THEN ADD THE FABRIC WRAPPED BASE ON TOP.

JEWELRY ORGANIZER CONFIG

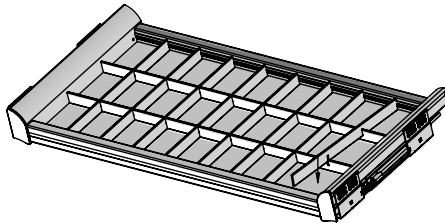

ADD A JEWELRY ORGANIZER INSERT INTO THE PULLOUT SHELF. REFER TO JEWELRY ORGANIZER INSTRUCTIONS FOR MORE.



DIVIDED SHELF CONFIG

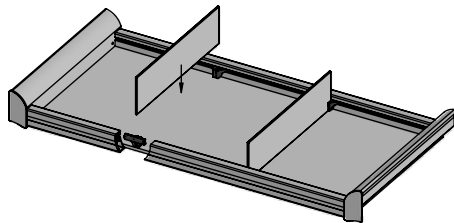

ADD SHELF DIVIDERS INTO THE PULL-OUT SHELF. REFER TO THE SHELF DIVIDER INSTRUCTIONS FOR MORE.


View How To Videos for more information.
<https://www.youtube.com/user/TagHardware>

STEP 1: INSERT THE PLASTIC CLIPS INTO THE CHANNEL ON THE FRONT AND REAR CROSSBARS. THE CLIPS CAN BE PLACED ANYWHERE ALONG THE CHANNEL.

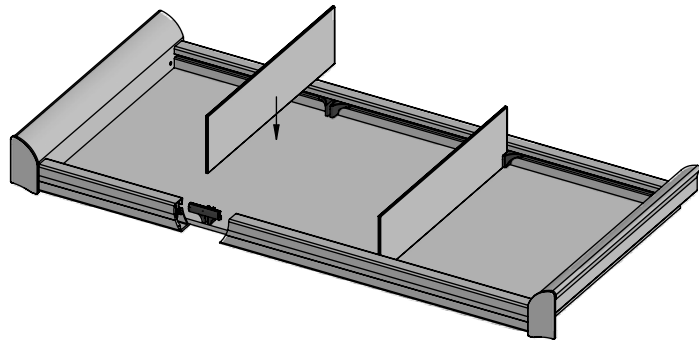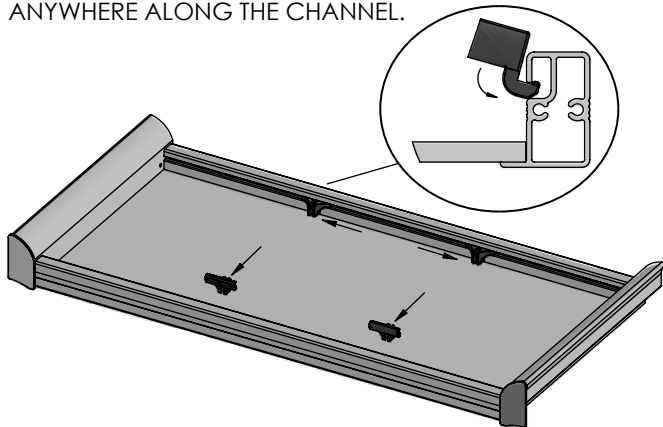


STEP 2: INSERT THE ACCESSORY DIVIDERS INTO THE CLIPS.

View How To Videos for more information.
<https://www.youtube.com/user/TagHardware>

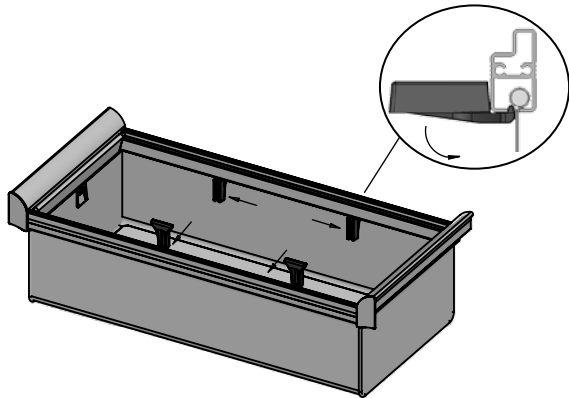


STEP 1: INSERT THE CLIPS INTO THE CHANNEL UNDER THE FRONT AND REAR CROSS BARS. THE CLIPS CAN BE PLACED ANYWHERE ALONG THE CHANNEL.

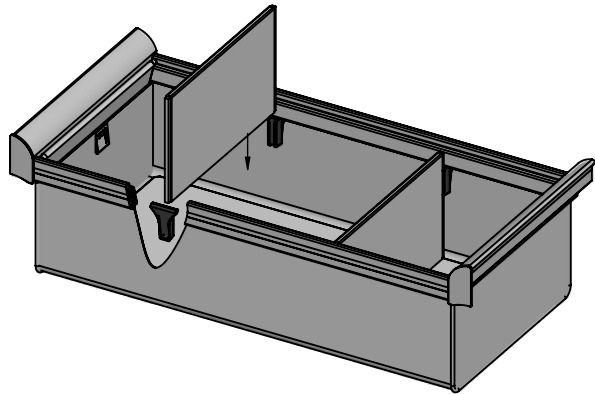

STEP 2: DROP THE LINGERIE/DEEP DIVIDERS INTO THE CLIPS

View How To Videos for more information.
<https://www.youtube.com/user/TagHardware>

LAUNDRY ORGANIZER CONFIG

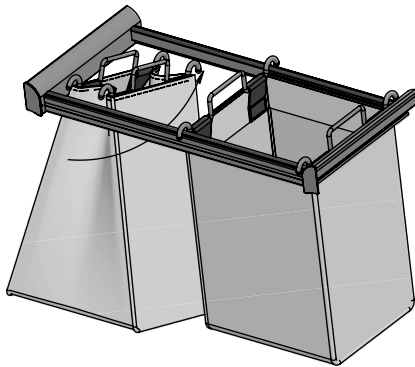

INSERT HANDLES INTO THE LOOPS INSIDE THE BAGS AND
PLACE BAGS INTO THE FRAME FROM UNDERNEATH.

PANT ORGANIZER CONFIG

18" | 12 Hangers



24" | 18 Hangers



30" | 24 Hangers




36" | 30 Hangers





ADD THE PANT HANGERS TO THE RACK BY INSERTING THEM
FROM UNDERNEATH THE FRAME.

View How To Videos for more information.
<https://www.youtube.com/user/TagHardware>

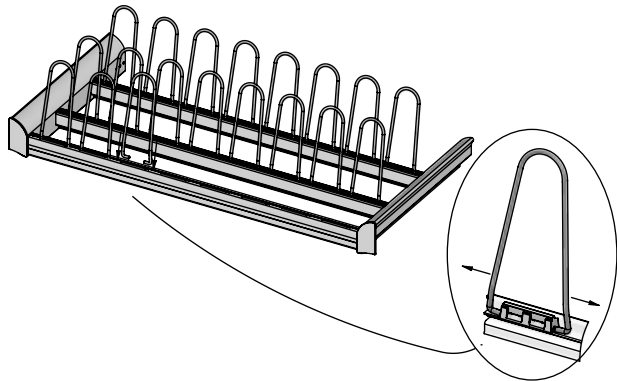ENGAGE SHOE
ORGANIZER



STEP 1: SPREAD SHOE HOLDERS AND INSERT THE ENDS INTO BOTH SIDES OF THE CLIPS LOCATED INSIDE THE CROSS-BARS. ENSURE HOLDERS ARE ANGLED TOWARDS THE REAR OF THE FRAME.

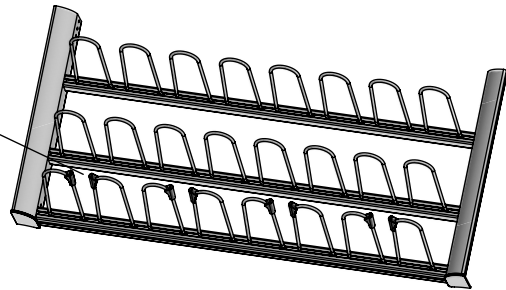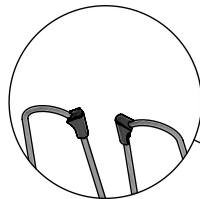


STEP 2: SANDAL CLIPS CAN BE ADDED BY SNAPPING THEM ONTO THE SHOE HOLDERS.

View How To Videos for more information.
<https://www.youtube.com/user/TagHardware>


STEP 1: HOLD MIRROR AT DESIRED HEIGHT & MARK 1 1/2" DOWN FROM TOP

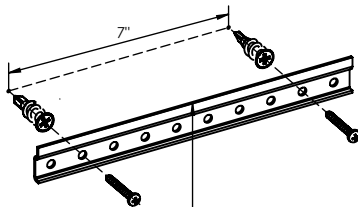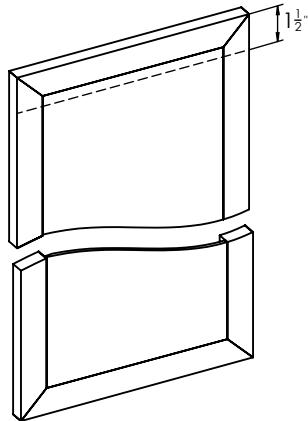

STEP 2: INSTALL TWO LARGE ANCHORS 7" APART ALONG MARK & MOUNT RAIL

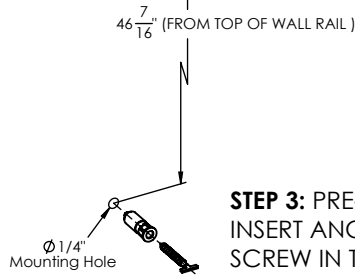


STEP 3: PRE-DRILL HOLE, INSERT ANCHOR AND SCREW IN T-BOLT




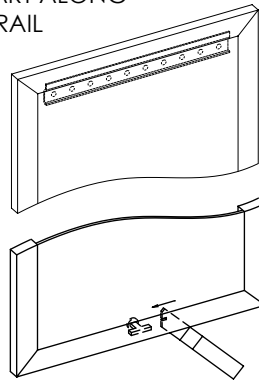


STEP 4: HANG MIRROR TOP ON RAIL, LOWER BOTTOM OVER T-BOLT

STEP 5: USE CURVED TOOL TO ROTATE T-BOLT BEHIND MIRROR UNTIL IT CONTACTS INSIDE FRAME

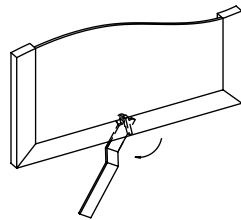


SLIDING FULL ROTATION MIRROR INSTALLATION

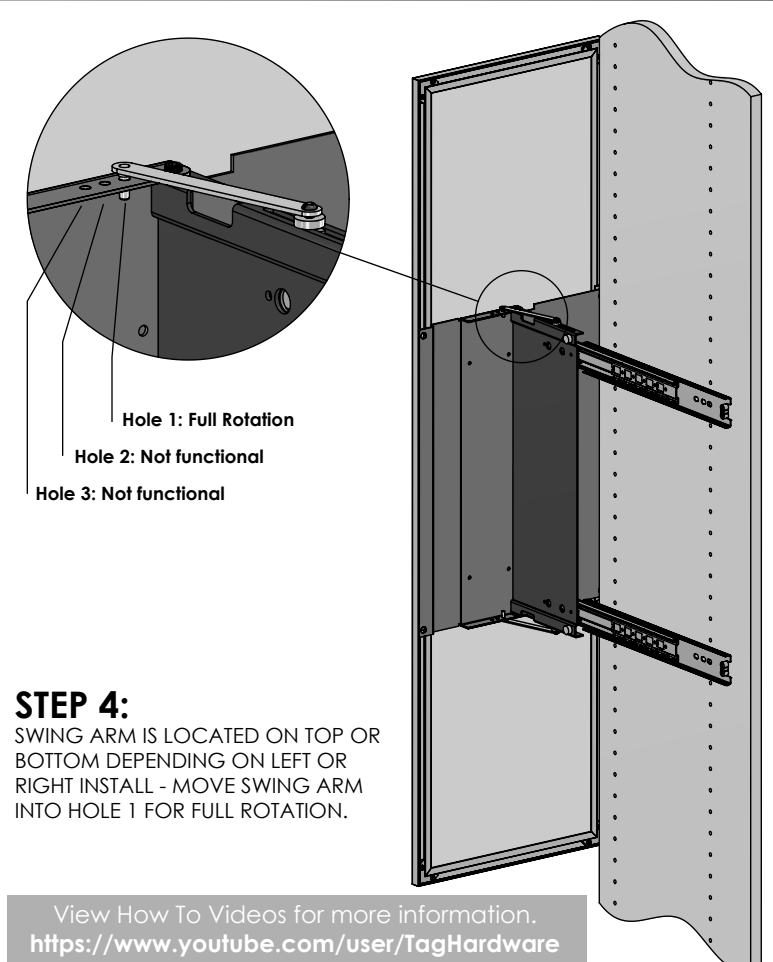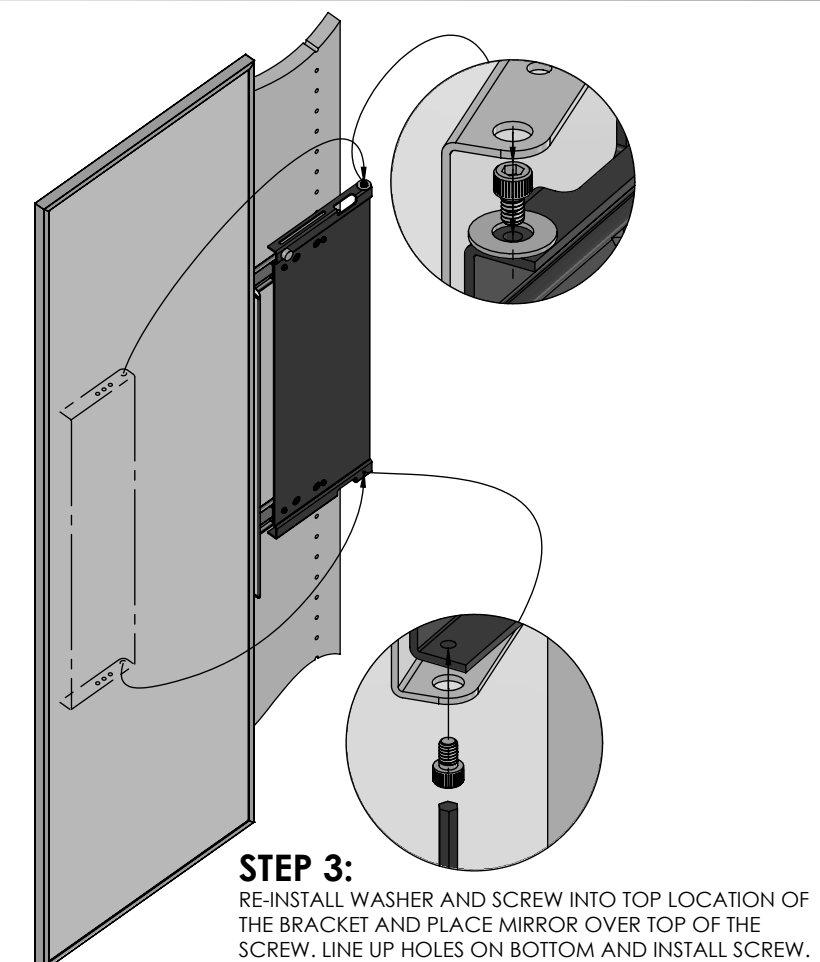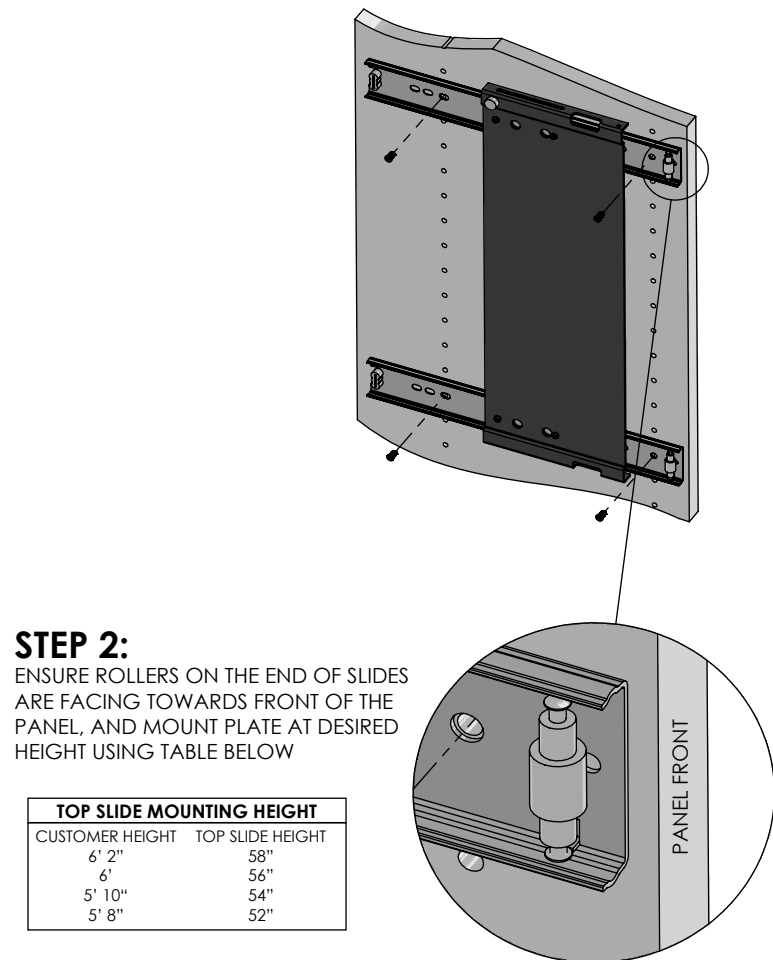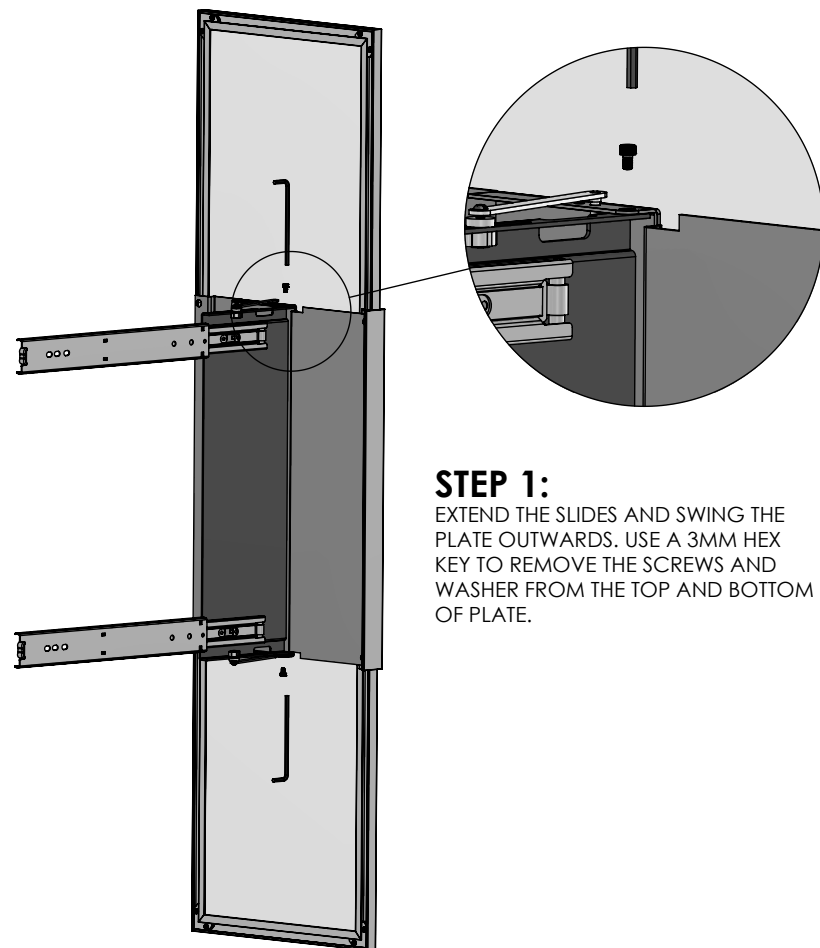

Hook Mounting Instructions


Side Panel Mounting Instructions

- 1.Place bracket onto side panel with Fixed End Cap facing the back
- 2.Move Hooks so that Side Panel Mounting Holes are visible.
- 3.Attach to Side Panel using 20mm Euro Screws (supplied) or #8 wood screw (customer supplied)
- 4.Slide Hooks back into Position.
- 5.Press Front End Cap into place.

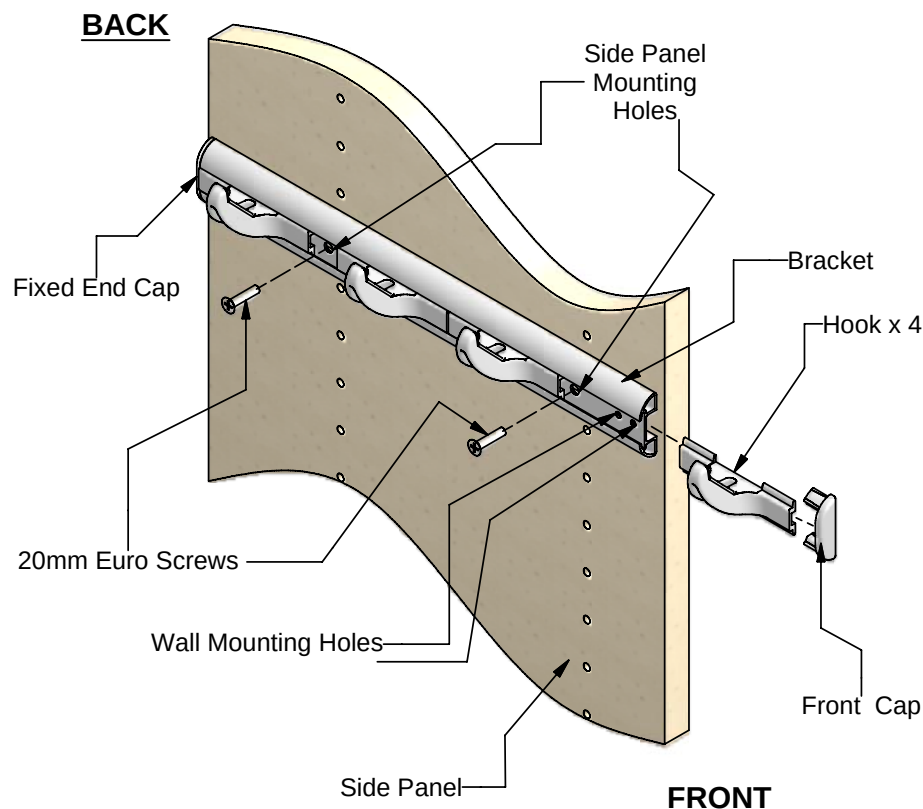


Wall Mounting Instructions

- 1.Move Hooks so that Wall Mounting Holes are visible
- 2.Attach Bracket via Wall Mounting Holes
- 3.Attach to Stud if possible. If Stud can not be located, use a wall anchor, such as the E-Z Anchor (Hafele Art.#.051.18.034) with No.8 X 1.5" wood screw.

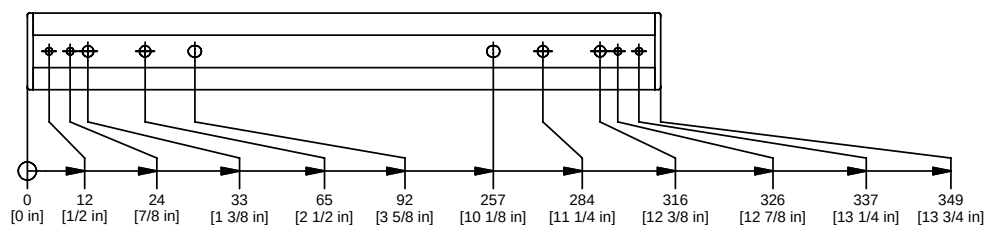

Tie/Belt/Scarf Rack Mounting Instruction

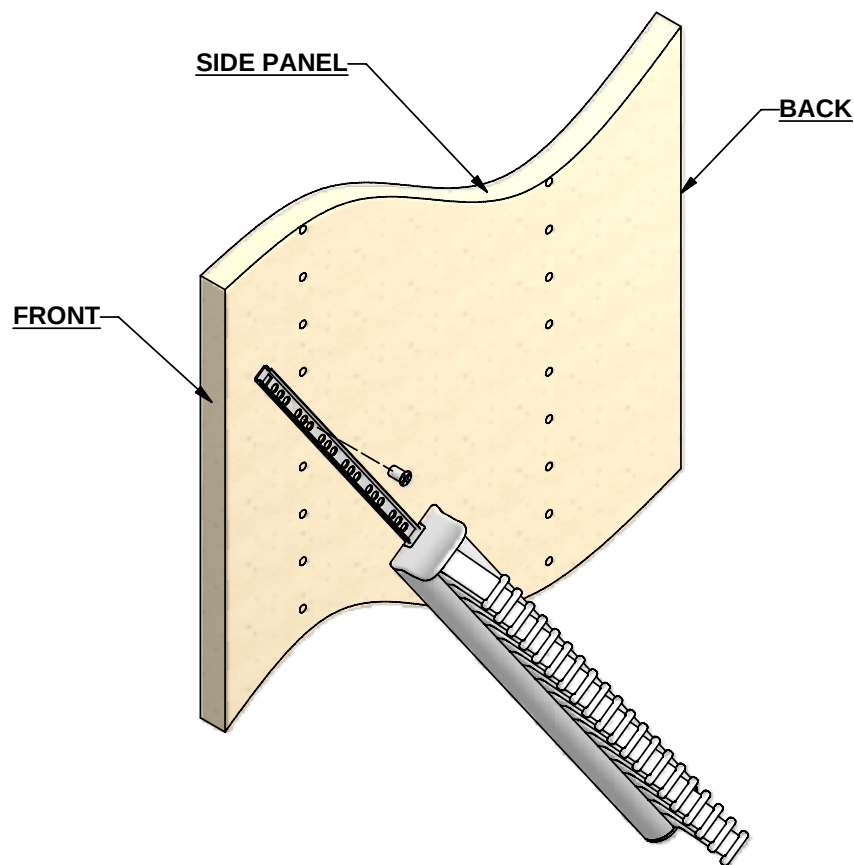


STEP 1. Extend slide forward past Finger Pill. Attach front end of slide to the side panel with Euro screw.
(For best results, use small head (7mm) 5mm dia. Euro Screws.)

NOTE: Front Screw must be installed first.

STEP 2. Pull rack forward and set level.


STEP 3. Attach rear end of slide with Euro Screw.
(For best results use small head (7mm) 5mm dia. Screws)

STEP 4. Snap Slide Stop into place on Finger Pull.

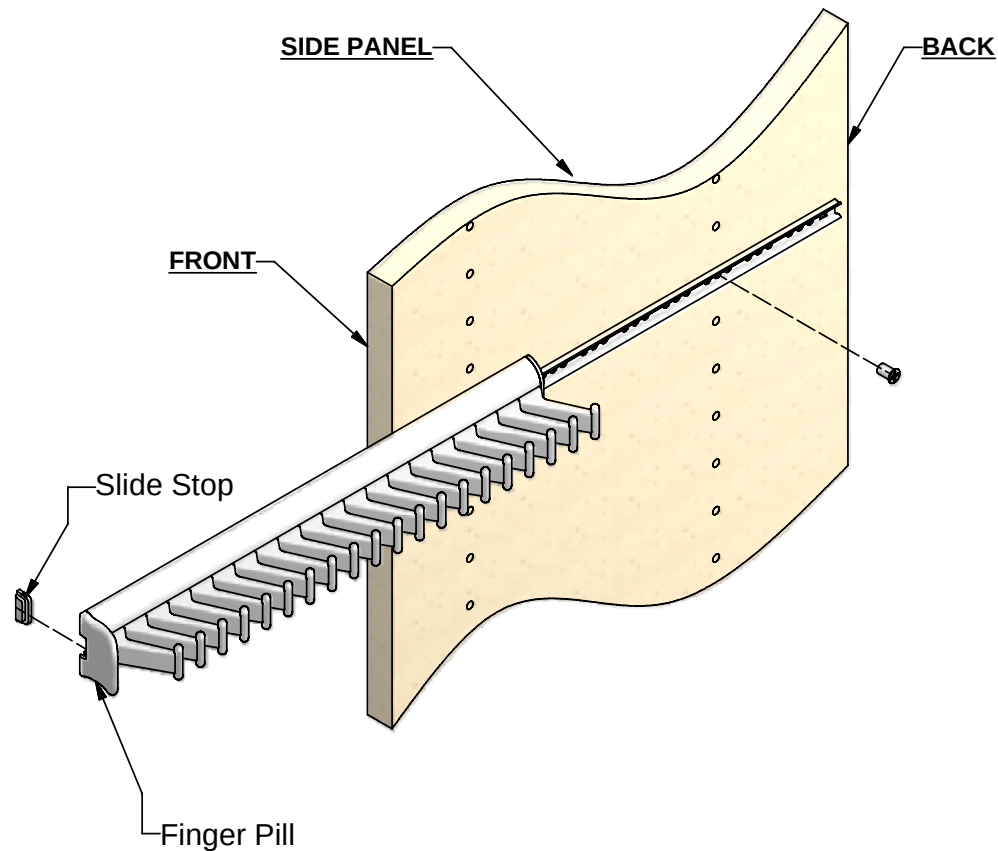


VALET Mounting Instructions


STEP 1. Pull the rod and remove it from the valet body.

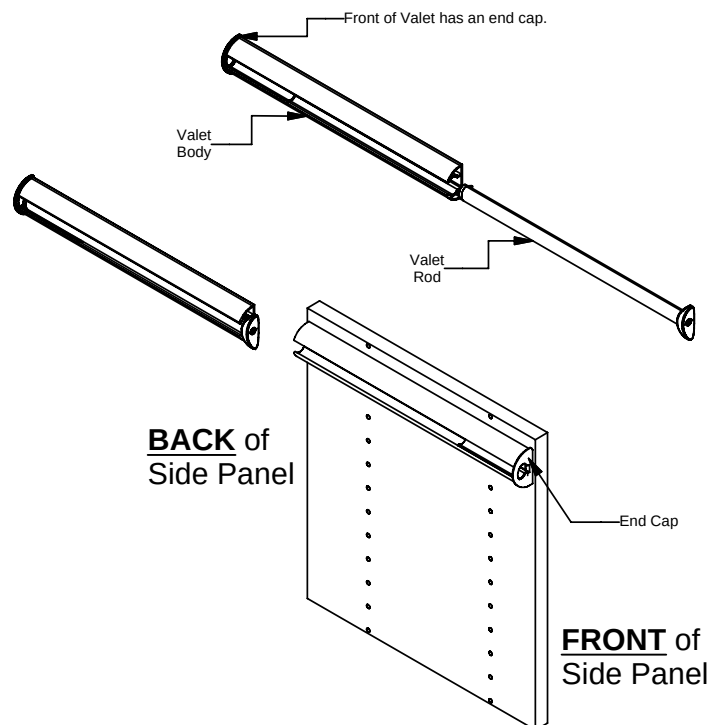




STEP 3. Once the valet body has been attached, slide the valet rod into the front of the valet body. (Align the black plastic end such that it passes through the cap on the front of the valet body.)

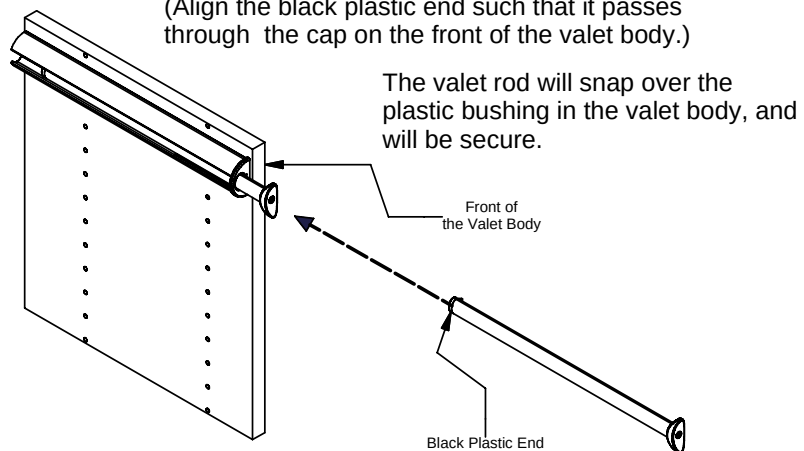

STEP 2. The valet body is mounted to the side of the closet using Euro Screws or #8 wood screw.

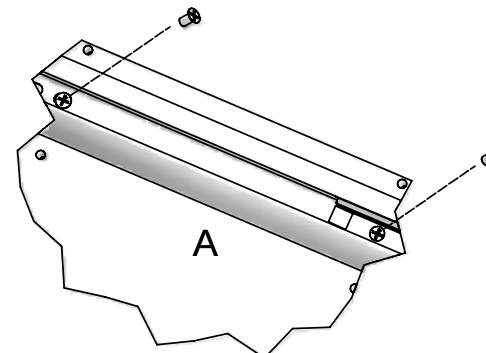


STEP 4. To relocate the valet, remove the rear screw on the valet rod, remove the plastic end cap, then pass it over the plastic bushing in the body.

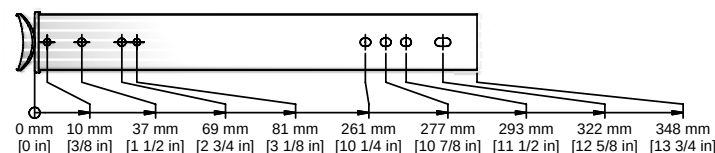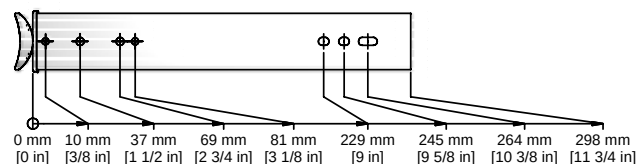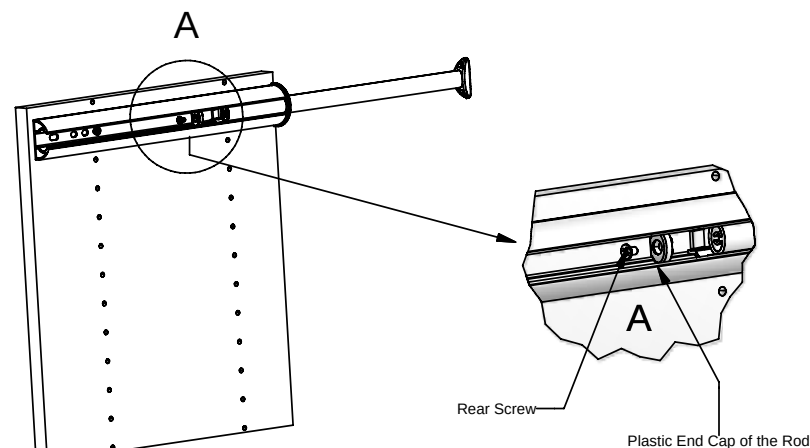


INSTALLATION INSTRUCTIONS

FOR FULL EXTENSION SLIDE WITH BASKET / WINE RACKS / SPICE RACKS

Step 1: PUSH PART A TO GET THE INNER SLIDE OUT.

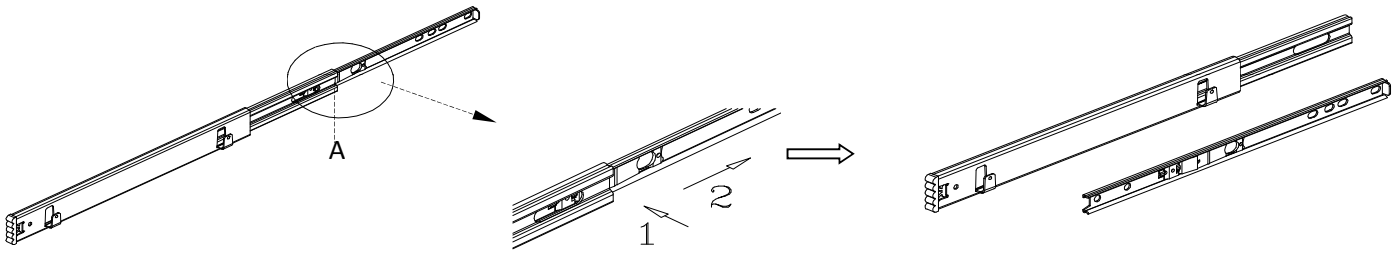


Step 2: SCREW INNER SLIDE TO THE PARTITION WALL.

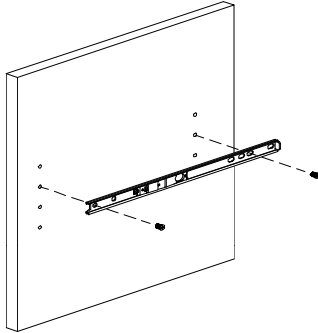


(Cabinet Front edge)


260m/m
(For 12" deep systems)

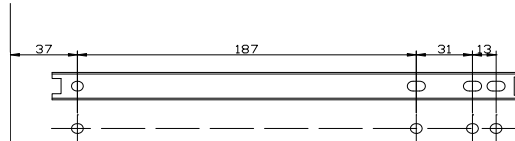


310m/m
(For 14" deep systems)




Step 3: JOIN OUTER SLIDE TOGETHER WITH THE INNER SLIDE.

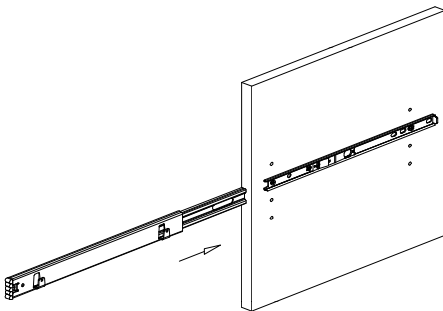


370m/m
(For 16" deep systems)

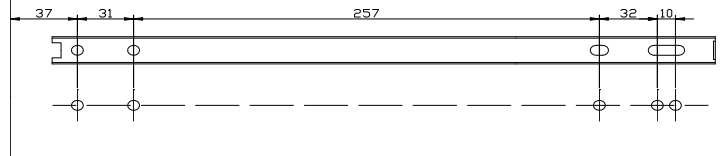



Step 4: HANG BASKET USING THE "SECOND RIM" ON SLIDE.

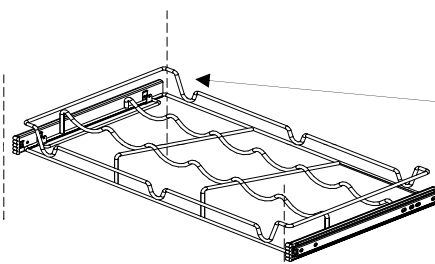

WINE RACKS

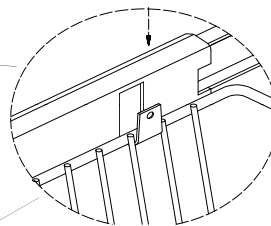

BASKET

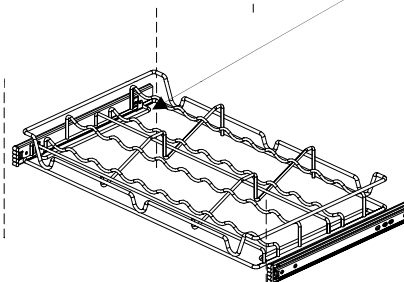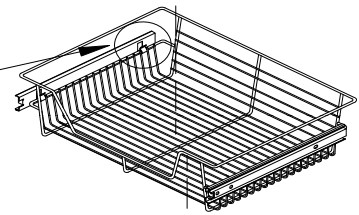


SPICE RACKS




12400 Earl Jones Way
Louisville, KY 40299
rev-a-shelf.com
Customer Service: 800-626-1126



STEP 1: DISCONNECT SLIDES BY MOVING LEVELER DOWN AS THE ARROW SHOWS AND PULL APART

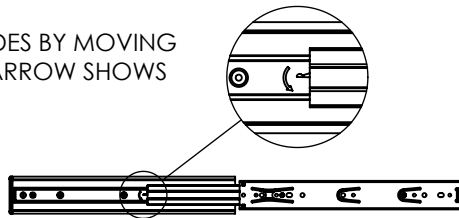

STEP 2: INSTALL THE INSIDE SLIDE MEMBER INTO THE PANEL SYSTEM HOLES WITH EURO SCREWS


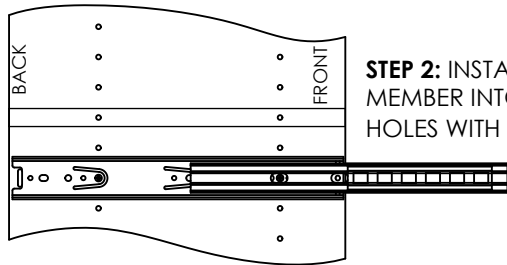


STEP 3: ALIGN SLIDE MEMBER INTO ENDS AND PUSH BACK TOGETHER

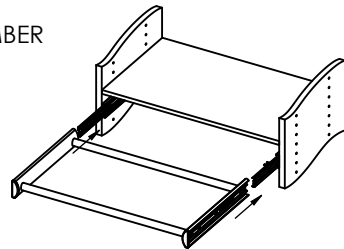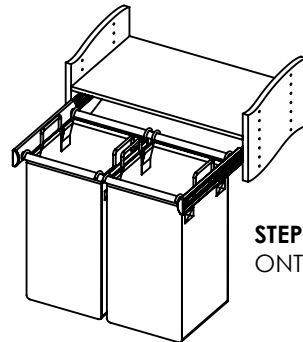


STEP 4: INSERT THE HAMPER BAGS ONTO THE FRAME FROM ABOVE

STEP 1: DISCONNECT SLIDES BY MOVING LEVELER DOWN AS THE ARROW SHOWS AND PULL APART

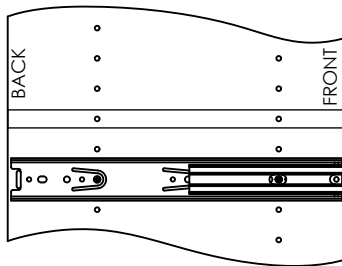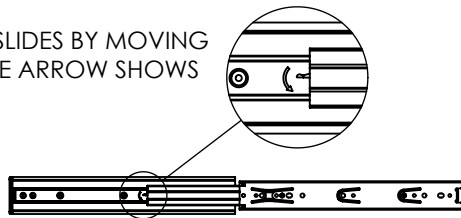

STEP 2: INSTALL THE INSIDE SLIDE MEMBER INTO THE PANEL SYSTEM HOLES WITH EURO SCREWS

STEP 3: ALIGN SLIDE MEMBER INTO ENDS AND PUSH BACK TOGETHER

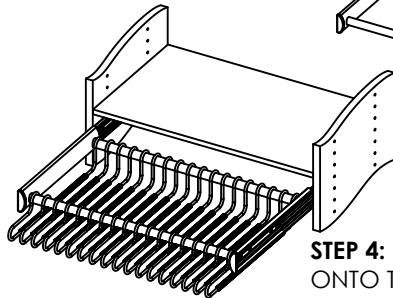

STEP 4: INSERT THE PANT HANGERS ONTO THE FRAME



ALBUM Closet Organizers - AW14 series

www.albumcloset.com


Assembly Instruction

AW14045 Pull-Out Frontal Shoe Rack


AW14045 Pull-Out Frontal Shoe Rack

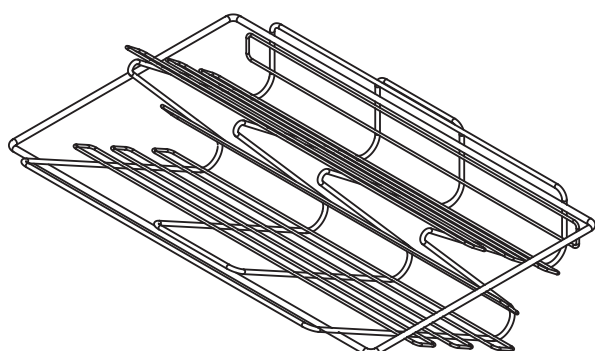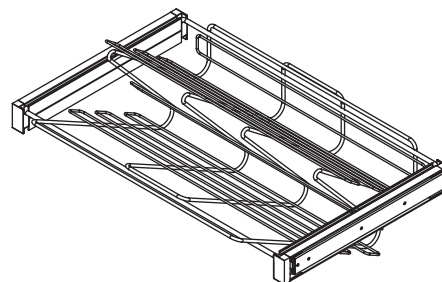


③

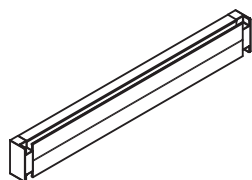


②

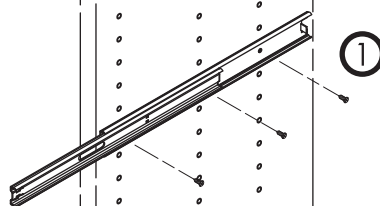


①

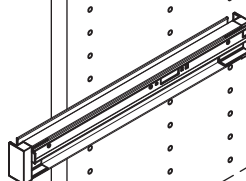

②

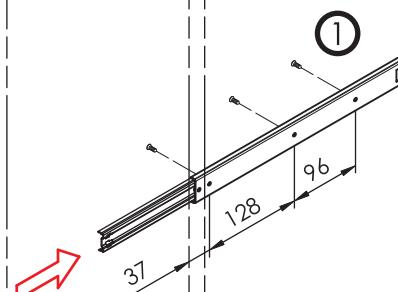

①

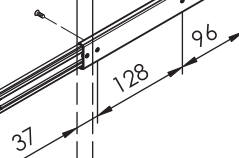


37


128

96



STEP 1: DRILL $\varnothing 5\text{mm}$ HOLES THRU SHELF AS SHOWN. FOR 24, 30, 36in SIZES, DRILL HOLE FOR CENTER POST $3/4\text{in}$ FROM FRONT EDGE

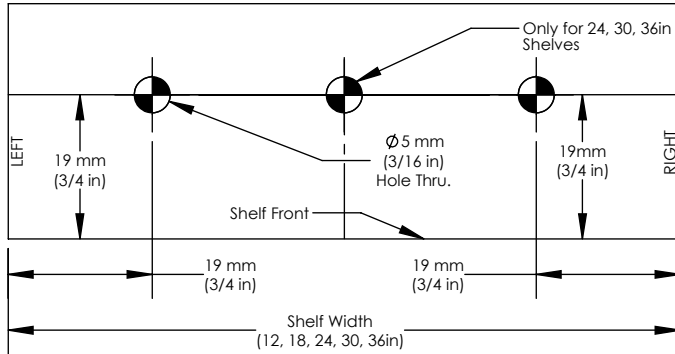


STEP 2: USE #8-32 x 1inch SCREWS TO ASSEMBLE

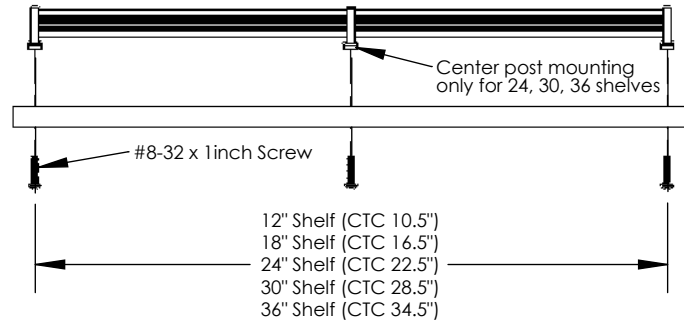


STEP 1: HOLD MIRROR AT DESIRED HEIGHT & MARK 1 1/2" DOWN FROM TOP

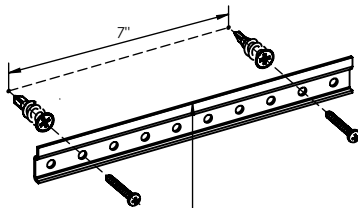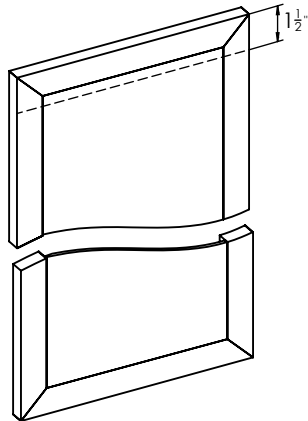

STEP 2: INSTALL TWO LARGE ANCHORS 7" APART ALONG MARK & MOUNT RAIL

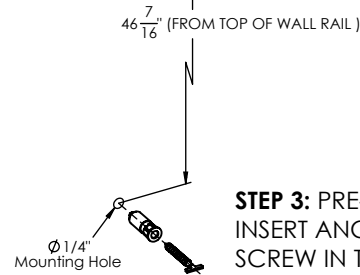


STEP 3: PRE-DRILL HOLE, INSERT ANCHOR AND SCREW IN T-BOLT

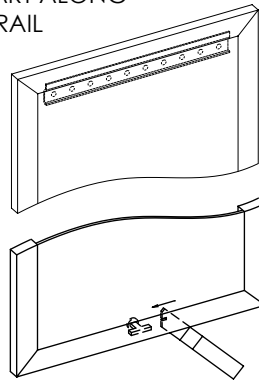

STEP 4: HANG MIRROR TOP ON RAIL, LOWER BOTTOM OVER T-BOLT

STEP 5: USE CURVED TOOL TO ROTATE T-BOLT BEHIND MIRROR UNTIL IT CONTACTS INSIDE FRAME

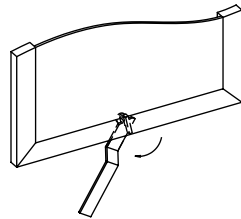

SLIDING FULL ROTATION MIRROR INSTALLATION

