


DRAWERS

To install the drawer slides, you need to separate the the slide into 2 pieces. The larger part attaches to the closet vertical panel. The smaller, inside part screws onto the side of the drawer.




Screw the drawer slides onto the sides of the drawer. The front of the drawer will have 2x 5mm holes going all the way through. Make sure the drawer slides are facing the correct direction.

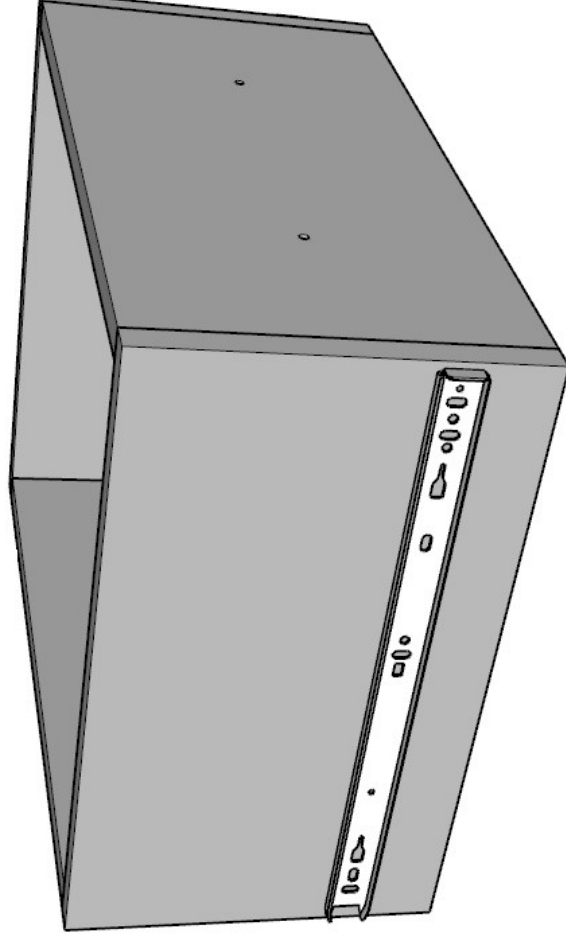

DRAWERS

It helps if you have the ball bearing part of the slide moved to the front on the side that is mounted on; align the drawer slide with the slide on the side and slide the drawer into the slides all the way.

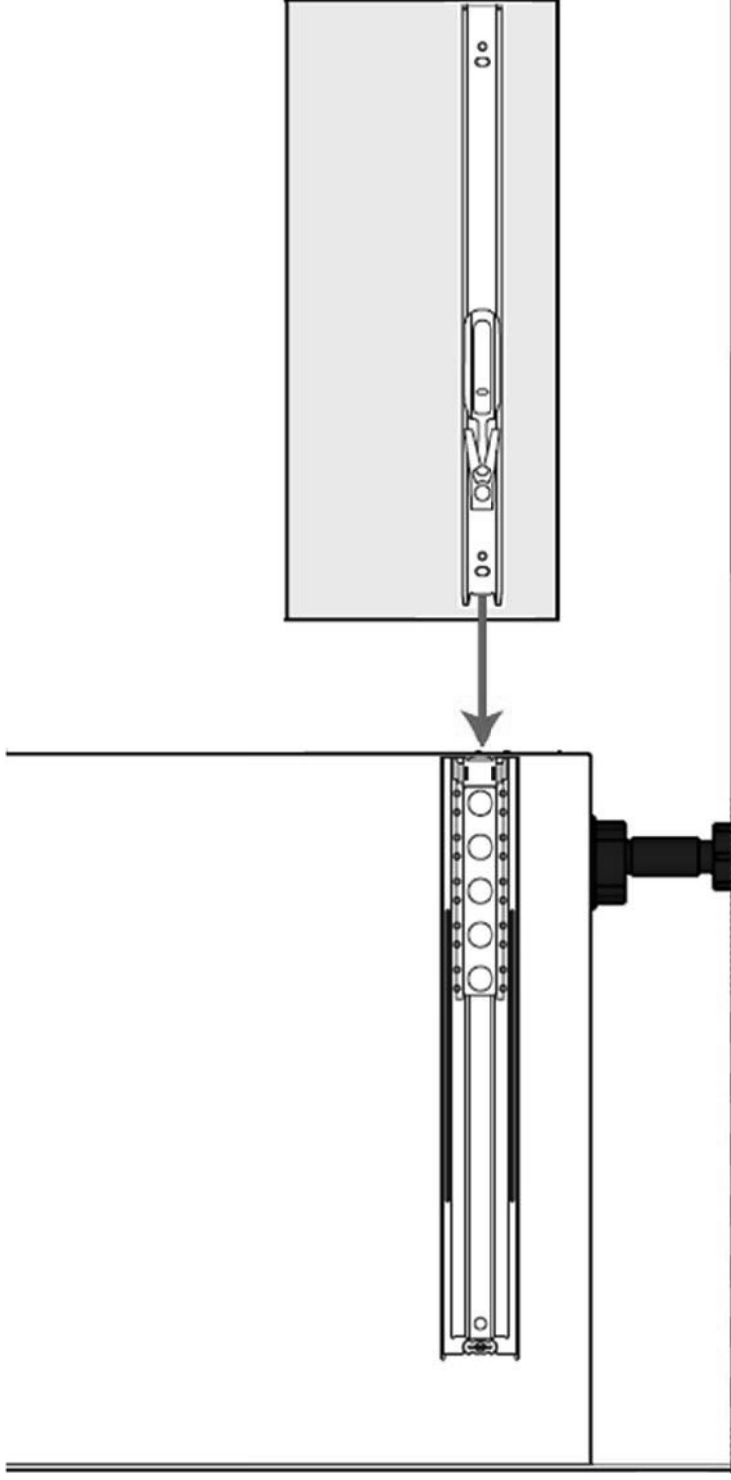

DRAWER FRONT INSTALLATION

The drawer front mounts onto the drawer by inserting the drawer front screw through the front of the drawer and into the drawer front connector, which has been installed into the back of the drawer front. Once the screw has started to thread in, the drawer front should stay attached to the drawer, and there should be approximately 1/16" movement in each direction. This will allow you to ensure equal spacing on all sides of the drawer. There drawer front should start flush with the bottom of the closet, and should have 1/8" between each drawer front. Once you have made the final adjustments, you can tighten the screw, and the drawer front should stay in place. Now you can drill holes through the drawer & drawer front for handles.

